LOVELAND pulseTV

Set-Top Box
REMOTE CONTROL GUIDE

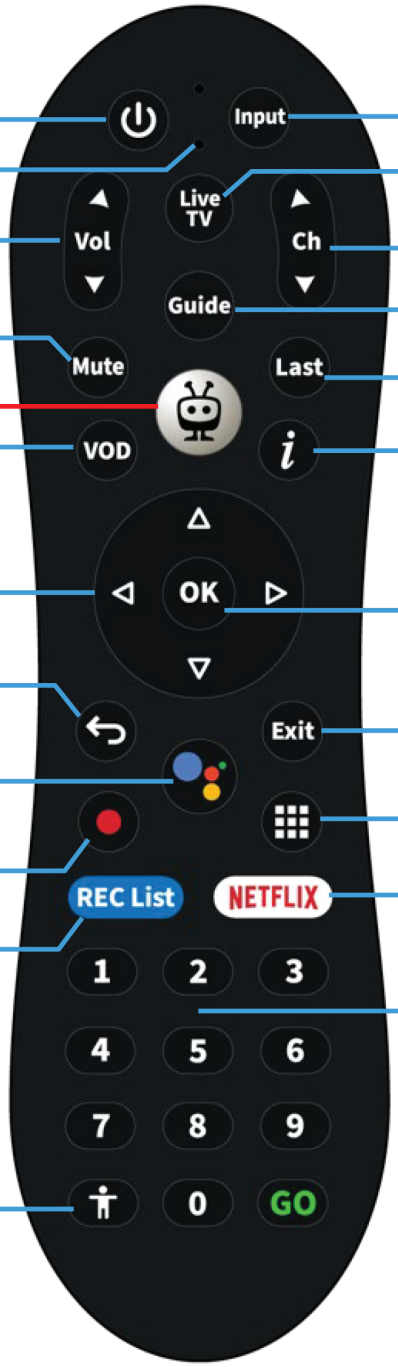

POWER turns the TV on or off.

MICROPHONE for Voice Search.

VOL controls the volume on your TV.

MUTE turns the sound on or off.

TIVO takes you to the main menu.

VOD opens the video on demand library.

NAVIGATE on screen using the UP, DOWN, LEFT, or RIGHT arrows.

BACK opens the Main Menu or returns to the previous screen.

VOICE SEARCH uses your voice to find what to watch.

RECORD the show you are watching or the selected show in the guide.

REC LIST shows a list of all your recorded content.

ACCESSIBILITY opens the menu where you can access Closed Captioning, text display settings, motion, and audio preferences.

INPUT changes your TV video source.

LIVE TV returns to the last live channel you were watching.

CH changes the channel up and down.

GUIDE takes you to the on-screen Guide.

LAST goes to the last viewed channel.

i shows more information about what you're watching.

OK accepts the current selection.

EXIT returns to the previous screen viewed.

APPS takes you to all your apps.

NETFLIX launches the Netflix app.

Use the NUMBER BUTTONS to enter channel selections and PIN codes for parental controls.

STB-WOR-Brook-2026.03